2.4G&WIRED&BT THREE MODE		tter for WIN		MENEL
Esc F1 F2 F3 F4 Tips: Quickly switch 2.4g/wired/Bluetooth mode by	7	# 9 0 - 9 1 1 0 P (1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	+ Backspace Henter Ctrl	
*The a		is for reference only, please see the re-	al product.	M
2.4G&WIRED&BT THREE MODE		ter for MAC		MENEL
* Tips: It can be switched to MAC system after hold o	T Y G H N B N N PN+~` in 2second	8 9 0 -	Backspace Backspace Backspace Backspace Comparison of the second of	Insert Home PgUp Delete End PgDn
EN combination kays manyal			IOS_MAC S	System model
FN combination keys manual COMMON PART	Windows_A	android System model		ly to switch the way to apply F1-F12 funtion W/FN or W/OFN.)
COMMON PART Keys Function description	Windows_A	Android System model Function description		
Keys Function description FN+ESC Long press for 2 seconds to restore factory mode, Press once shortly to switch the way to apply F1-F12		-	(Press FN+ESC once short	ly to switch the way to apply F1-F12 funtion W/FN or W/OFN.)
COMMON PART Keys Function description ENHESC Long press for 2 seconds to restore factory mode,	Keys	Function description	(Press FN+ESC once short	y to switch the way to apply F1-F12 funtion W/FN or W/OFN.) Function description
Keys Function description FN+ESC Long press for 2 seconds to restore factory mode, Press once shortly to switch the way to apply F1-F12 funtion W/FN or W/O FN in the MAC system FN+Left WIN Lock or unlock the WIN key (IOS_MAC System automatically unlocked) FN+~` Hold down for 2 seconds to switch to Win/Mac	Keys FN+F1	Function description Display brightness -	(Press FN+ESC once short Keys FN+F1	v to switch the way to apply F1-F12 funtion W/FN or W/OFN.) Function description Display brightness -
Keys Function description FN+ESC Long press for 2 seconds to restore factory mode, Press once shortly to switch the way to apply F1-F12 funtion W/FN or W/O FN in the MAC system FN+Left WIN Lock or unlock the WIN key (IOS_MAC System automatically unlocked) FN+~` Hold down for 2 seconds to switch to Win/Mac FN+Right CTRL Backlight mode switch	Keys FN+F1 FN+F2	Function description Display brightness - Display brightness +	(Press FN+ESC once short Keys FN+F1 FN+F2	y to switch the way to apply F1-F12 funtion W/FN or W/OFN.) Function description Display brightness - Display brightness +
Keys Function description FN+ESC Long press for 2 seconds to restore factory mode, Press once shortly to switch the way to apply F1-F12 funtion W/FN or W/O FN in the MAC system FN+Left WIN Lock or unlock the WIN key (IOS_MAC System automatically unlocked) FN+~` Hold down for 2 seconds to switch to Win/Mac	Keys FN+F1 FN+F2 FN+F3	Function description Display brightness - Display brightness + WIN+TAB (Mission control)	(Press FN+ESC once short Keys FN+F1 FN+F2 FN+F3	vito switch the way to apply F1-F12 function W/FN or W/OFN.) Function description Display brightness - Display brightness + Mission control
Keys Function description FN+ESC Long press for 2 seconds to restore factory mode, Press once shortly to switch the way to apply F1-F12 funition W/FN or W/O FN in the MAC system FN+Left WIN Lock or unlock the WIN key (IOS_MAC System automatically unlocked) FN+~` Hold down for 2 seconds to switch to Wirv/Mac FN+Right CTRL Backlight mode switch FN+Right SHIFT Backlight color switch FN+DEL Go to static backlight FN+INS Enter or exit the power saving mode	Keys FN+F1 FN+F2 FN+F3 FN+F4	Function description Display brightness - Display brightness + WIN+TAB (Mission control) WIN+E (Turn on my computer)	Keys FN+F1 FN+F2 FN+F3 FN+F4	vito switch the way to apply F1-F12 funtion W/FN or W/O FN.) Function description Display brightness - Display brightness + Mission control Back to homepage Default Default
Keys Function description FN+ESC Long press for 2 seconds to restore factory mode, Press once shortly to switch the way to apply F1-F12 funtion W/FN or W/O FN in the MAC system FN+Left WIN Lock or unlock the WIN key (IOS_MAC System automatically unlocked) FN+~ Hold down for 2 seconds to switch to Wirv/Mac FN+Right CTRL Backlight mode switch FN+Right SHIFT Backlight color switch FN+DEL Go to static backlight	Keys FN+F1 FN+F2 FN+F3 FN+F4 FN+F5	Function description Display brightness - Display brightness + WIN+TAB (Mission control) WIN+E (Turn on my computer) Email Homepage PREV	Keys FN+F1 FN+F2 FN+F3 FN+F4	y to switch the way to apply F1-F12 funtion W/FN or W/O FN.) Function description Display brightness - Display brightness + Mission control Back to homepage Default
Keys Function description FN+ESC Long press for 2 seconds to restore factory mode, Press once shortly to switch the way to apply F1-F12 funtion W/FN or W/O FN in the MAC system FN+Left WIN Lock or unlock the WIN key (IOS_MAC System automatically unlocked) FN+~` Hold down for 2 seconds to switch to Win/Mac FN+Right CTRL Backlight mode switch FN+Right SHIFT Backlight color switch FN+DEL Go to static backlight FN+INS Enter or exit the power saving mode FN+UP/Down Change backlight brightness, up go brighter	Keys FN+F1 FN+F2 FN+F3 FN+F4 FN+F5 FN+F6 FN+F7 FN+F8	Function description Display brightness - Display brightness + WIN+TAB (Mission control) WIN+E (Turn on my computer) Email Homepage PREV Play \ Pause	(Press FN+ESC once short Keys FN+F1 FN+F2 FN+F3 FN+F4 FN+F5 FN+F6 FN+F7 FN+F8	y to switch the way to apply F1-F12 funtion W/FN or W/O FN.) Function description Display brightness - Display brightness + Mission control Back to homepage Default Default PREV Play \ Pause
Keys Function description FN+ESC Long press for 2 seconds to restore factory mode, press for 2 seconds to switch the way to apply F1-F12 funtion W/ FN or W/O FN in the MAC system FN+Left WIN Lock or unlock the WIN key (IOS_MAC System automatically unlocked) FN+~` Hold down for 2 seconds to switch to Win/Mac FN+Right CTRL Backlight mode switch FN+Right SHIFT Backlight color switch FN+Right SHIFT Go to static backlight FN+INS Enter or exit the power saving mode FN+UP/Down key and down go darker FN+Left/Right Change the backlight speed, left go slow and	Keys FN+F1 FN+F2 FN+F3 FN+F4 FN+F5 FN+F6 FN+F7 FN+F7 FN+F8 FN+F9	Function description Display brightness - Display brightness + WIN+TAB (Mission control) WIN+E (Turn on my computer) Email Homepage PREV Play \ Pause NEXT	Keys FN+F1 FN+F2 FN+F3 FN+F4 FN+F5 FN+F6 FN+F7 FN+F8 FN+F9	vito switch the way to apply F1-F12 funtion W/FN or W/O FN.) Function description Display brightness - Display brightness + Mission control Back to homepage Default Default PREV Play \ Pause NEXT
Keys Function description FN+ESC Long press for 2 seconds to restore factory mode, Press once shortly to switch the way to apply F1-F12 funtion W. FN or W/O FN in the MAC system FN+Left WIN Lock or unlock the WIN key (IOS_MAC System automatically unlocked) FN+` Hold down for 2 seconds to switch to Win/Mac FN+Right CTRL Backlight mode switch FN+Right SHIFT Backlight color switch FN+DEL Go to static backlight FN+INS Enter or exit the power saving mode FN+UP/Down key and down go darker FN+Left/Right Change backlight brightness, up go brighter and down go darker FN+Left/Right Change the backlight speed, left go slow and right go fast FN+Backspace Ouery the battery power under BT mode. (only if the battery is powered separately) FN+1 Press to switch to BT device 1, and press for	Keys FN+F1 FN+F2 FN+F3 FN+F4 FN+F5 FN+F6 FN+F7 FN+F8 FN+F9 FN+F10	Function description Display brightness - Display brightness + WIN+TAB (Mission control) WIN+E (Turn on my computer) Email Homepage PREV Play \ Pause NEXT Mute	(Press FN+ESC once short Keys FN+F1 FN+F2 FN+F3 FN+F4 FN+F5 FN+F6 FN+F6 FN+F7 FN+F8 FN+F9 FN+F10	y to switch the way to apply F1-F12 funtion W/FN or W/O FN.) Function description Display brightness - Display brightness + Mission control Back to homepage Default Default PREV Play \ Pause NEXT Mute
Keys Function description FN+ESC Long press for 2 seconds to restore factory mode, press once shortly to switch the way to apply F1-F12 funiton W/FN or W/O FN in the MAC system FN+Left WIN Lock or unlock the WIN key (IOS_MAC System automatically unlocked) FN+~` Hold down for 2 seconds to switch to Win/Mac FN+Right CTRL Backlight mode switch FN+Right SHIFT Backlight color switch FN+DEL Go to static backlight FN+INS Enter or exit the power saving mode FN+UP/Down Change backlight brightness, up go brighter and down go darker FN+Left/Right Change the backlight speed, left go slow and right go fast Ouery the battery power under BT mode. (only if the battery is powered separately)	Keys FN+F1 FN+F2 FN+F3 FN+F4 FN+F5 FN+F6 FN+F7 FN+F7 FN+F8 FN+F9	Function description Display brightness - Display brightness + WIN+TAB (Mission control) WIN+E (Turn on my computer) Email Homepage PREV Play \ Pause NEXT	Keys FN+F1 FN+F2 FN+F3 FN+F4 FN+F5 FN+F6 FN+F7 FN+F8 FN+F9	vito switch the way to apply F1-F12 funtion W/FN or W/O FN.) Function description Display brightness - Display brightness + Mission control Back to homepage Default Default PREV Play \ Pause NEXT

2.4G\wired\BT mode indicator description

Pressing FN combination key in 3seconds to enter 2.4G paired receiver mode

Customized backlight recording save

FN+Z\X\C Backlight customized key 1\2\3

FN+4

FN+V

Pull the switch to 2.4G mode, factory has paired receiver 1 to 1 ok, but if you need re-pair the dongle, press FN Put the switch to 2.4G mode, factory has paired receiver 1 to 1 ok, but if you need re-pair the dongle, press FN +4, and the green light of the charging indicator will flash to search the receiver. After successful connection, the green light is on for 3s and then off. When the paired dongle cannot be found for 60s, the matching code will be quit and charging indicator will be extinguished. The keyboard reconnection needs 10s, at the same time the green light of charging indicator will flash slowly, and the keyboard will go to sleep when the keyboard fails to connect back. After the reconnection is successful, the green light is on for 3s and then off. When the keyboard is not used, the backlight will be turned off after 120s, and the keyboard will fall asleep after 10min.

The white led of charge mode will be light on then back to previous light effect after 3 seconds, when it is at

the wired mode. BT mode:

Change the Button to BT mode, the combination key for BT connection is 1,2 and 3. Long press FN+1/2/3 for 3s to broadcast, short press alone to switch BT devices, press the combination key for 3s to enter the pairing state, and the charging indicator LED color (Corresponding to BT device 1,2 and 3 colors) will flash. After the pairing is successful, the charging indicator light is on for 3s and then off.When the matching device cannot be found in 60s, the pairing will be quit and charging indicator will be extinguished. The keyboard reconnection needs 10s, at which time the indicator LED will flash slowly, and the keyboard will go to sleep when the keyboard falls to connect back. After the reconnection is successful, the indicator LED is on for 3s and then off. When the keyboard is not used, the backlight will be turned off after 120s, and the keyboard will fall asleep after 10min.

The corresponding colors of BT devices 1.2 and 3 are as follows:

The corresponding colors of BT devices 1, 2 and 3 are as follows: (a) BT 1- Blue (B255 G:0) Corresponding BT name: X80 BT50 KB1 (b) BT 2- Light Blue (b: 255 G:125) Corresponding BT name: X80 BT50 KB2

(c) BT 3- Sky Blue (B:255 G:255) Corresponding BT name: X80 BT5.0 KB3 Charging mode:

When the USB cable is plugged in, it means in charging if the indicator light shows in red and it will be off after the voltage reach 4.2V, which means the power has been fully charged. When you plug in the USB cable, it charges whether the bottom toggle switch is on or not.

Low power mode:

When the power is less than 20%, the charging indicator will alternately flash red to prompt the user to charge. (Note: When the battery voltage is lower than 3.1V, the keyboard will stop working directly, and can not wake up. At this time, when the key is hit, the keyboard will only have the charging indicator flashing, and no other response. Be sure to plug in the USB cable to charge to 3.1V above so keyboard could be waked up.)

Matters Need Attention:

1. When Connecting device, pay attention to the code indicator. The device can search for the BT keyboard only when the indicator is flashing quickly. If it is a slow flash state, representing the keyboard in the state to back connect (At this point, the device cannot search for the keyboard), you need to press the code combination one more time (FN + 1 or 2 or 3), see the light flash to loosen, the equipment can normal search to the BT keyboard.

2. Note: The operating voltage of the keyboard is DC 5V, so do not use the power adapter higher than 5V to charge the keyboard, otherwise it will burn out the components and cause the keyboard to not work properly.

Product Spec Data

Product Type: RGB dual system three mode mechanical keyboard Product Size: 363.8mm (L) x144mm (W) x44mm (H) Total key number: 87 keys Switch lifespan: >50 millions Keyboard function: All keys anti-ghosting Conduction Travel: 1.5mm~2.4mm Working voltage: 5V Cable connector type: TYPE-C Cable length: 1.6 meters Keyboard connector type: USB2.0



MENEL

It can enter the driver for setting (including music rhythm, light adjustment, FN layer edits, sleep time, macro download, etc.) in wireless 2.4g mode (when working in wired mode is preferred)

