



# GHOST S1 TOPHAT Mk III LQ-GHS103-TH

**USER MANUAL (ENG)** 

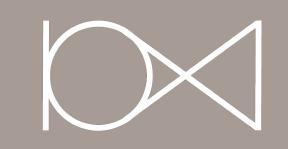




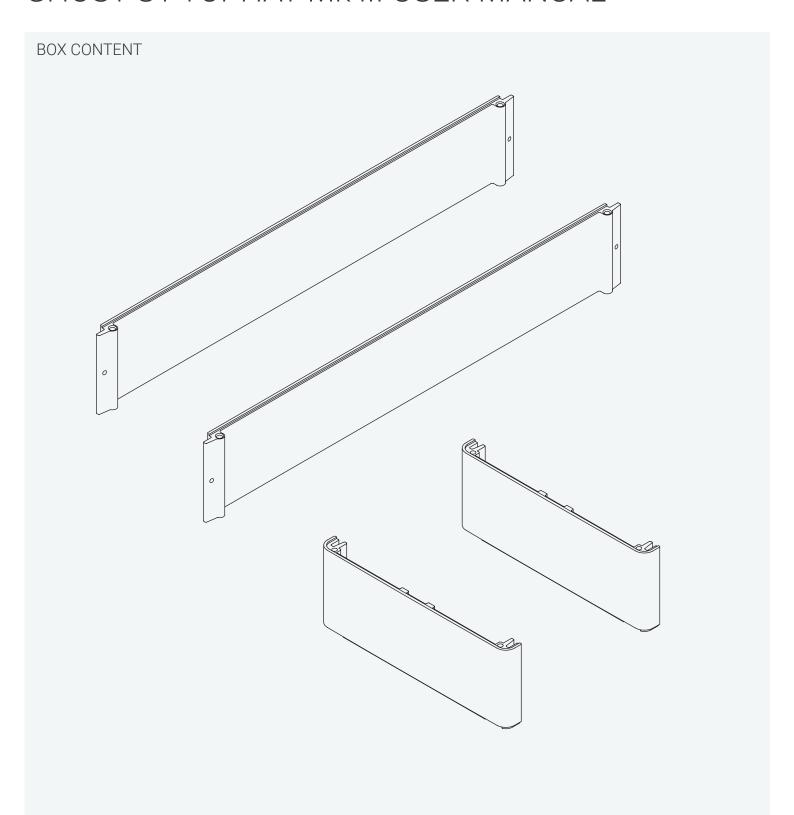




4x M3x8 button head




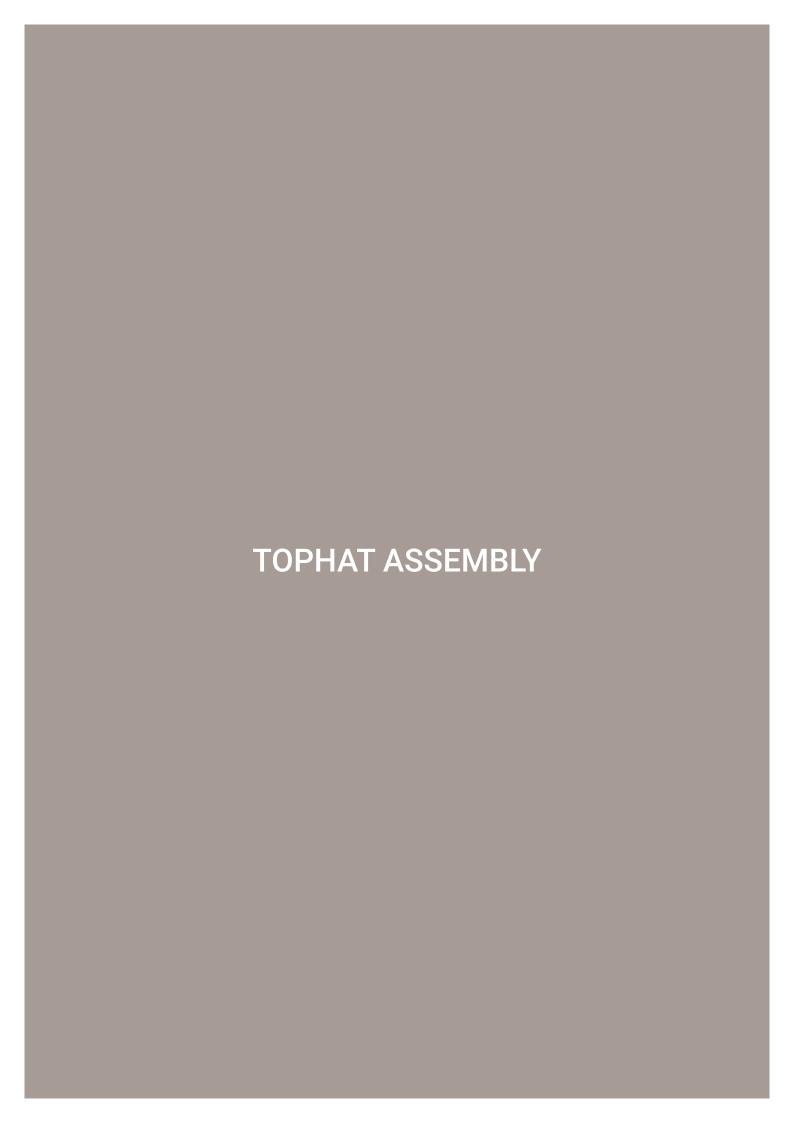

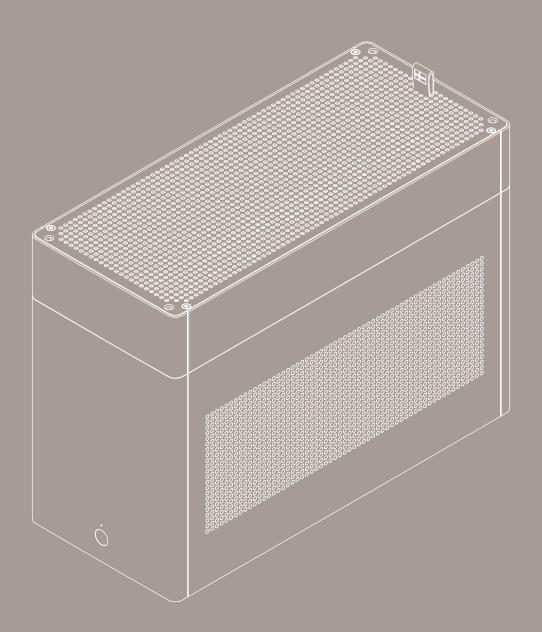

TOPHAT ASSEMBLY TOP POSITION

#### **ILLUSTRATION**

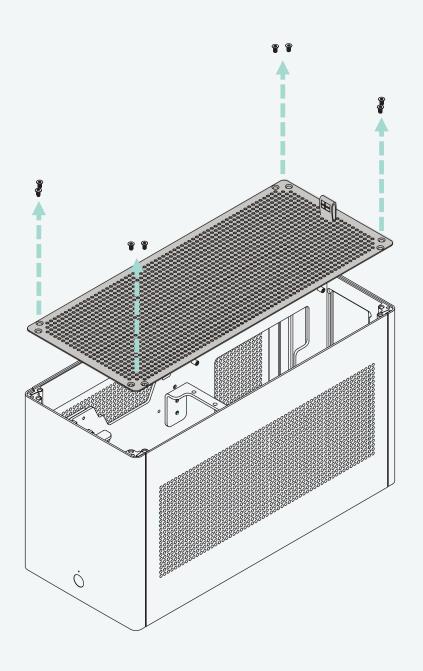

#### **ASSEMBLY STEPS**

- Unscrew the 8 countersunk screws holding the grill
- Lift the grill away by pulling the rag tag in the back

#### SCREWS










**ILLUSTRATION** 

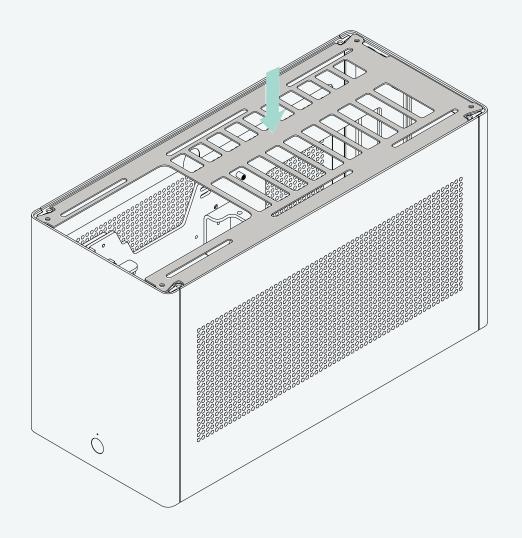


#### **ASSEMBLY STEPS**

 Place the Top Plate mounting platform on top of the case with the side lips pointing downwards (if necessary) **SCREWS** 







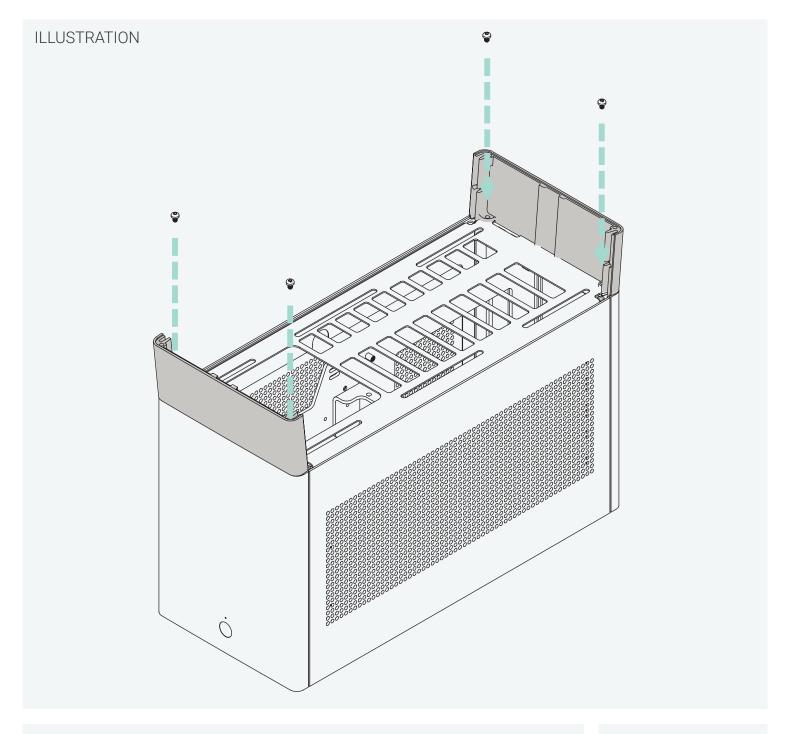

#### **ASSEMBLY STEPS**


• Put the TopHat front and back gables on the case gables and slightly screw them down using the 4 of M3x8 button screws.







### ILLUSTRATION

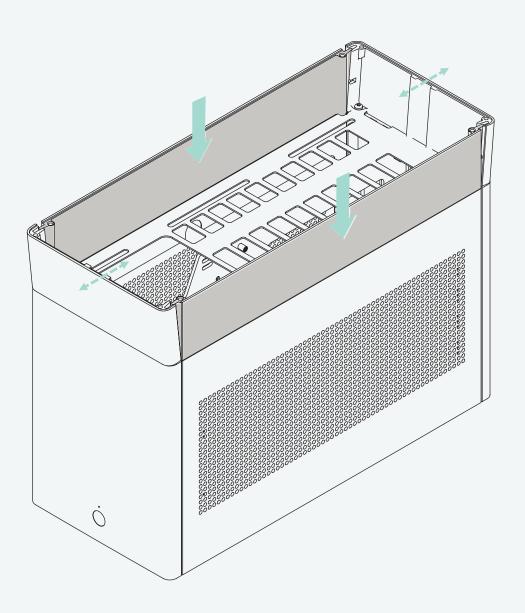

#### **ASSEMBLY STEPS**


- Make sure the gables sit loose but not falling off
- Slide down the TopHat side sheets into place

#### SCREWS







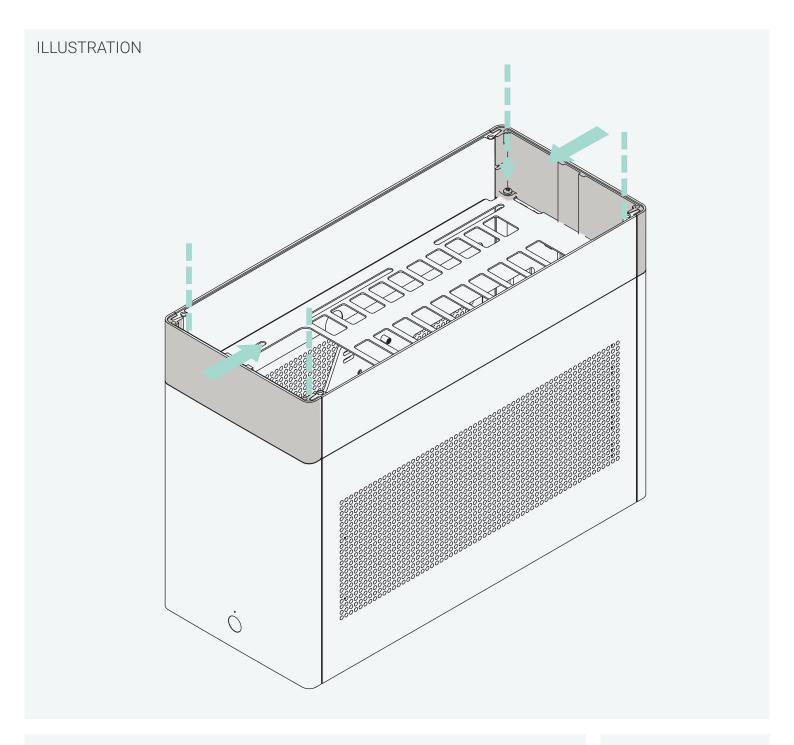

### ASSEMBLY STEPS


- Push each TopHat gable in to the TopHat side sheets, see that it sits well on your case
- Screw 4 M3x8 button screws all the way down (the ones connecting to case)









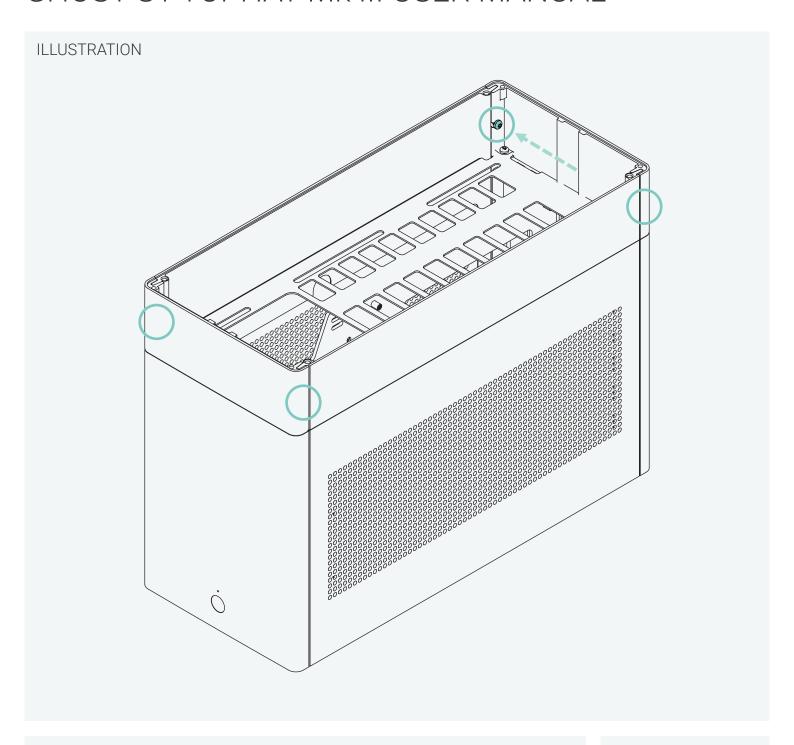

#### **ASSEMBLY STEPS**


• Connect TopHat gables to the side sheets by securing them with 4 of M3x4 button head screws in the middle






х4




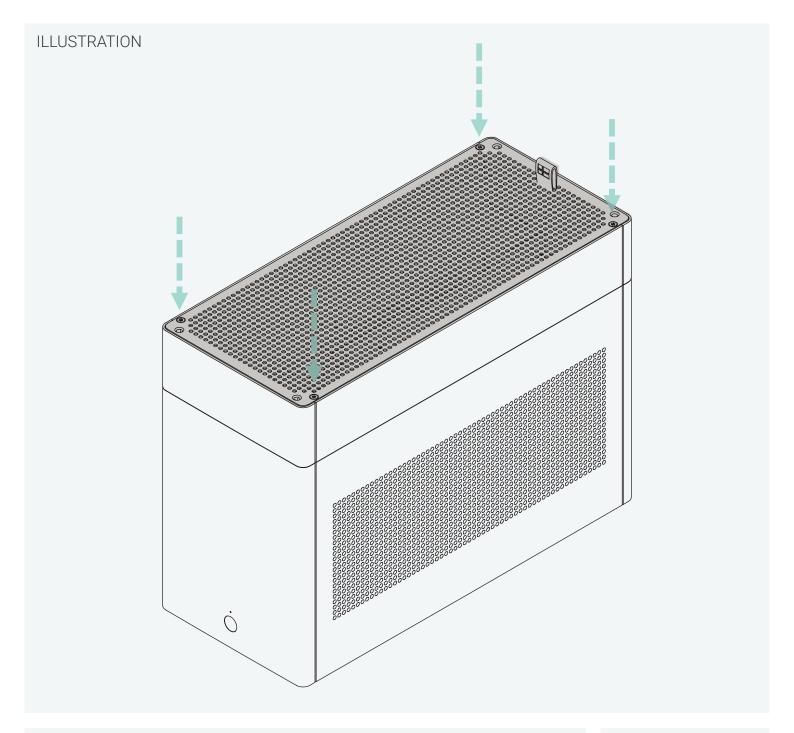


#### **ASSEMBLY STEPS**

 Place the Grill on the TopHat and screw it down to the TopHat side sheets using 4 countersunk screws

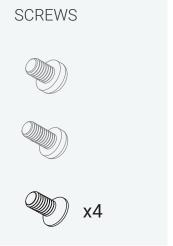

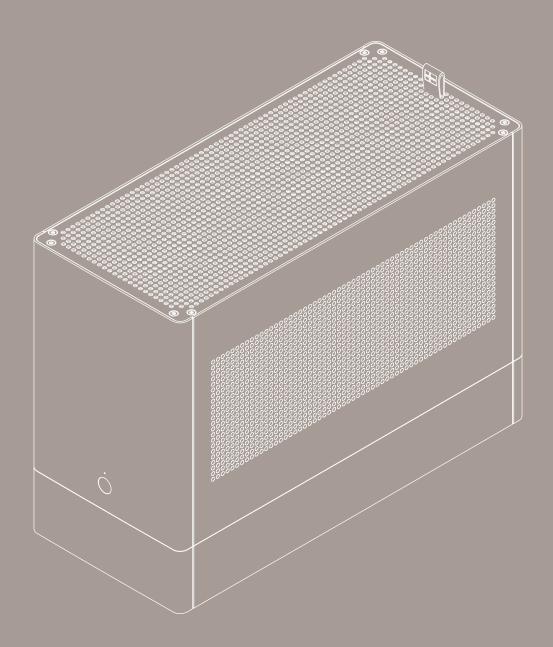


TOPHAT ASSEMBLY BOTTOM POSITION

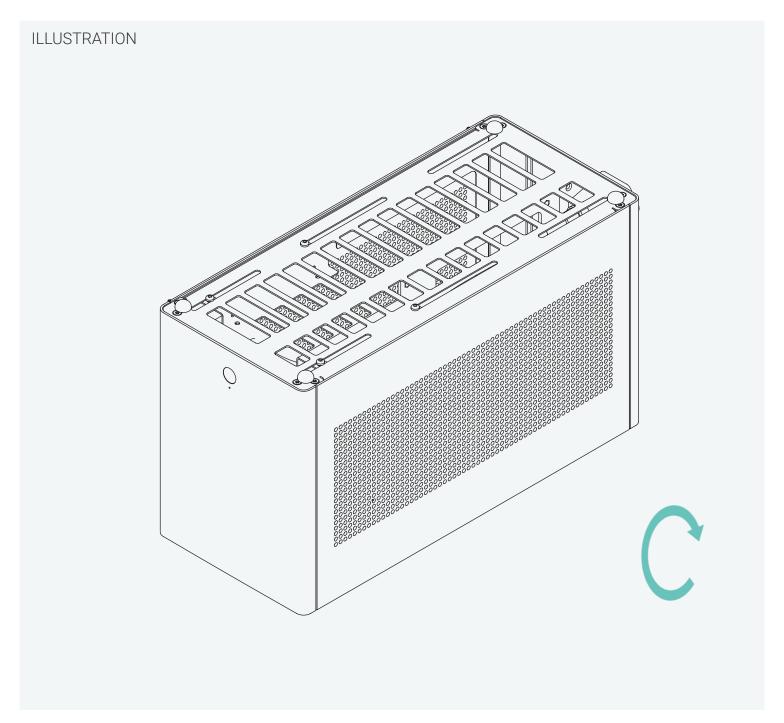


### ASSEMBLY STEPS

• Turn the case upside down

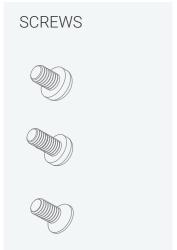



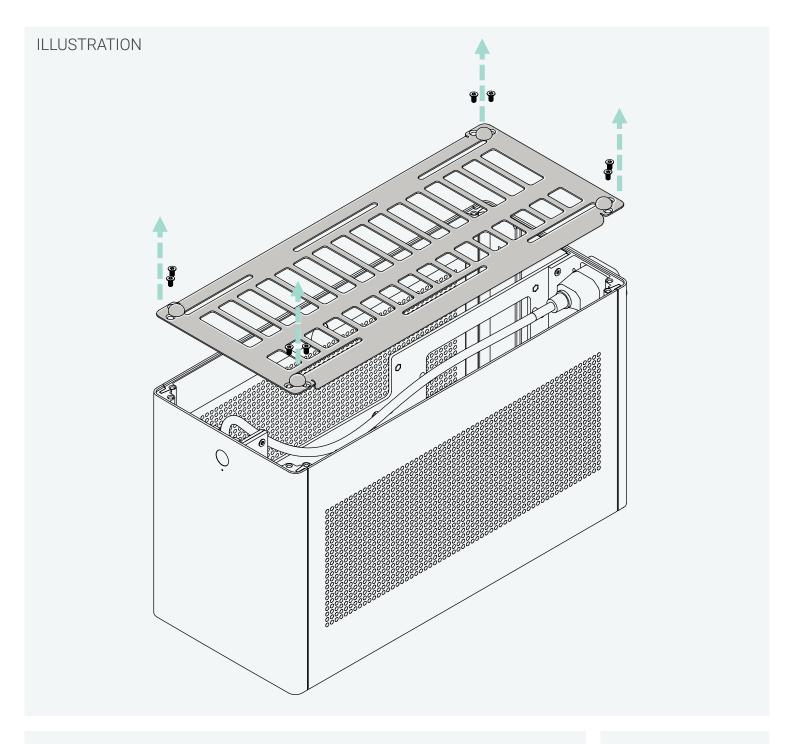

#### **ASSEMBLY STEPS**


 Remove the Bottom Plate from the case bottom view by unscrewing the 8 countersunk screws









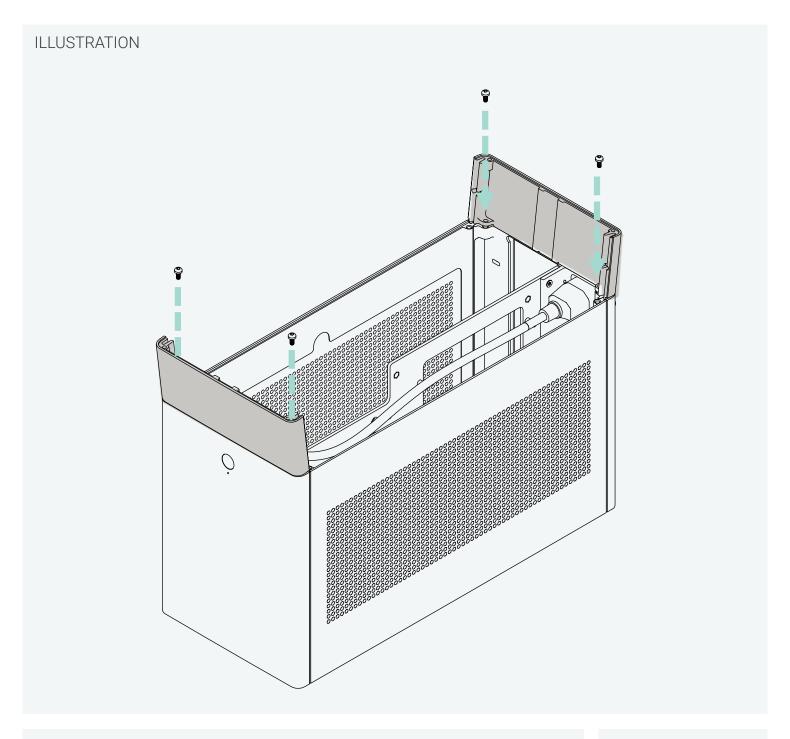


#### **ASSEMBLY STEPS**

• Put the TopHat front and back gables on the case gables and slightly screw them down using the 4 of M3x8 button screws.







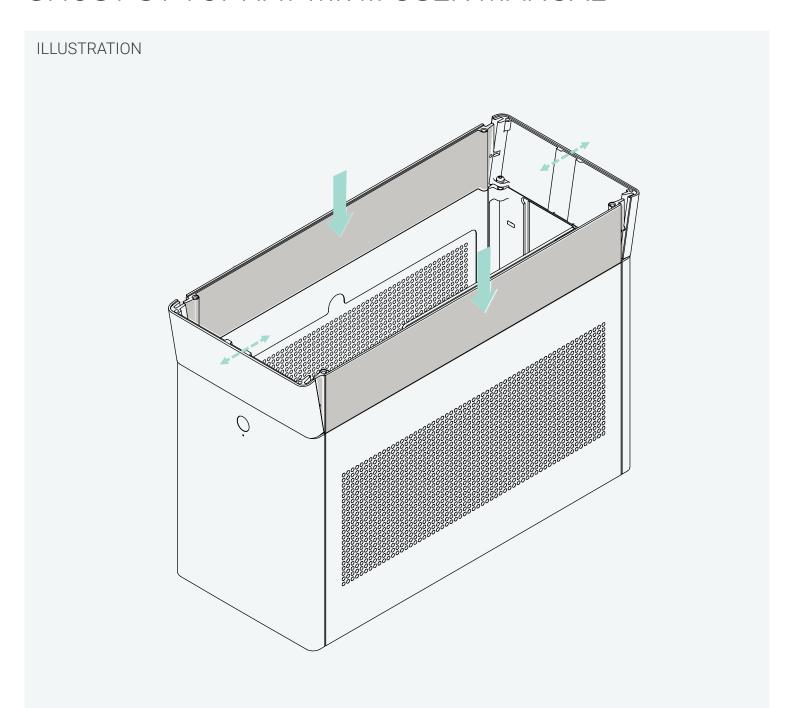

#### **ASSEMBLY STEPS**


- Make sure the gables sit loose but not falling off
- Slide down the TopHat side sheets into place









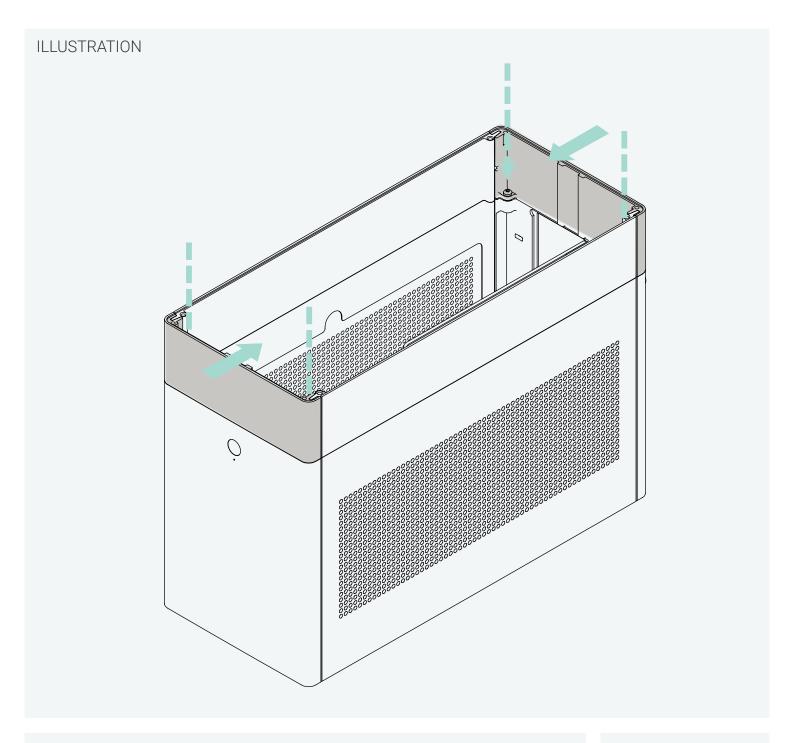

### ASSEMBLY STEPS


- Push each TopHat gable in to the TopHat side sheets, see that it sits well on your case
- Screw 4 M3x8 button screws all the way down (the ones connecting to case)









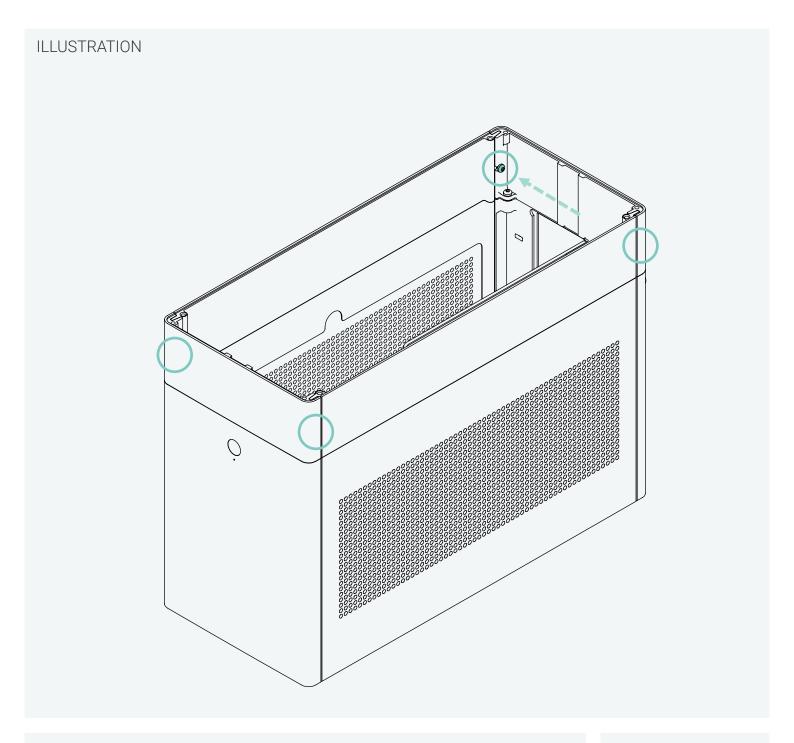

#### **ASSEMBLY STEPS**


• Connect TopHat gables to the side sheets by securing them with 4 of M3x4 button head screws in the middle





yΔ



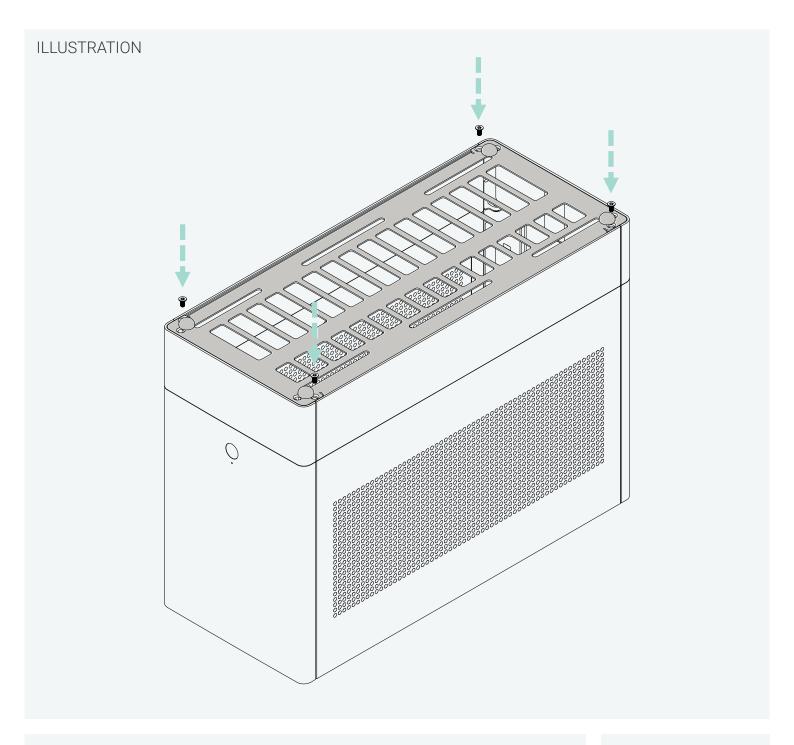

#### **ASSEMBLY STEPS**

• Put the Bottom Plate back into place and screw it down to the TopHat side sheets using 4 countersunk screws













LOUQE AB Designed in Sweden hello@louqe.com www.louqe.com